

uCables.com

Tecnologias de diagnostico y reparacion de automoviles

# Toyota OBD-II Trouble codes

Code	Description
P1100	BARO Sensor Circuit.
P1120	Accelerator Pedal Position Sensor Circuit.
P1121	Accelerator Pedal Position Sensor Range/Performance Problem.
P1125	Throttle Control Motor Circuit.
P1126	Magnetic Clutch Circuit.
P1127	ETCS Actuator Power Source Circuit.
P1128	Throttle Control Motor Lock.
P1129	Electric Throttle Control System.
P1130	Air/Fuel Sensor Circuit Range/Performance. (Bank 1 Sensor 1)
P1133	Air/Fuel Sensor Circuit Response. (Bank 1 Sensor 1)
P1135	Air/Fuel Sensor Heater Circuit Response. (Bank 1 Sensor 1)
P1150	Air/Fuel Sensor Circuit Range/Performance. (Bank 1 Sensor 2)
P1153	Air/Fuel Sensor Circuit Response. (Bank 1 Sensor 2)
P1155	Air/Fuel Sensor Heater Circuit. (Bank 1 Sensor 2)
P1200	Fuel Pump Relay Circuit.
P1300	Igniter Circuit Malfunction - No. 1.
P1310	Igniter Circuit Malfunction - No. 2.
P1335	No Crankshaft Position Sensor Signal - Engine Running.
P1349	VVT System.
P1400	Sub-Throttle Position Sensor.
P1401	Sub-Throttle Position Sensor Range/Performance Problem.
P1405	Turbo Pressure Sensor Circuit.
P1406	Turbo Pressure Sensor Range/Performance Problem.
P1410	EGR Valve Position Sensor Circuit Malfunction.
P1411	EGR Valve Position Sensor Circuit Range/Performance.
P1500	Starter Signal Circuit.
P1510	Boost Pressure Control Circuit.
P1511	Boost Pressure Low.
P1512	Boost Pressure High.
P1520	Stop Lamp Switch Signal Malfunction.
P1565	Cruise Control Main Switch Circuit.
P1600	ECM BATT Malfunction
P1605	Knock Control CPU.
P1630	Traction Control System.
P1633	ECM.
P1652	Idle Air Control Valve Control Circuit.
P1656	OCV Circuit.
P1658	Wastegate Valve Control Circuit.
P1661	EGR Circuit.
P1662	EGR by-pass Valve Control Circuit.
P1780	Park/Neutral Position Switch Malfunction (Only For A/T)